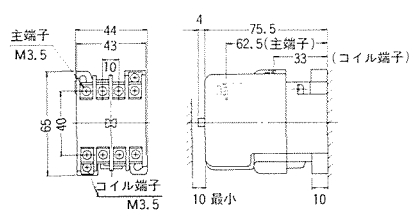
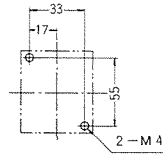
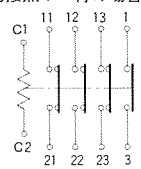
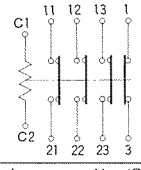
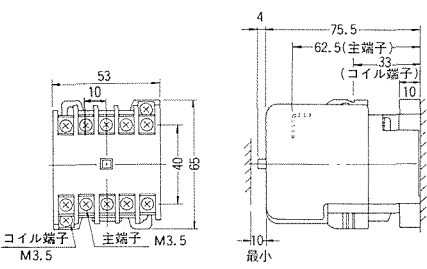
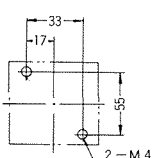
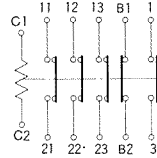
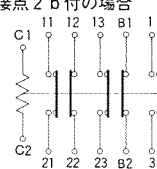
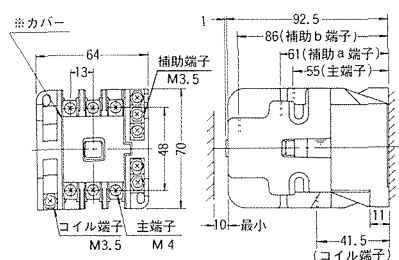
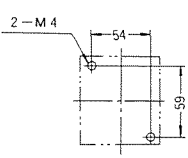
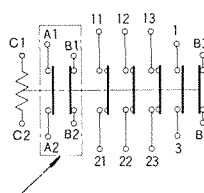
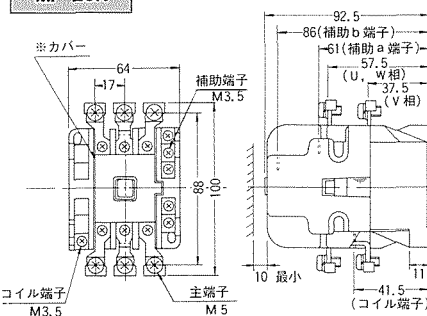
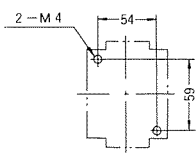
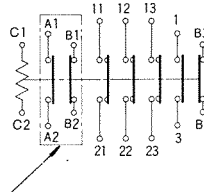



外形・穴明寸法図

1.非可逆形・電磁接触器

外形寸法	穴明寸法図(mm)	接点構成図	端子部寸法(mm)																				
MP-10N 	 34×48 34×52 35×50も取付可能	●補助接点 1 a 付の場合(標準)  ●補助接点 1 b 付の場合 	<table><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr></table>	主回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8	操作回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8
主回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					
操作回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					
MP-11N 	 34×43 34×52 35×50も取付可能	●補助接点 1 a 1 b 付の場合(標準)  ●補助接点 2 b 付の場合 	<table><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr></table>	主回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8	操作回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8
主回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					
操作回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					
MP-15N 	 54×56 54×60も取付可能	 補助接点 2 a 2 b の場合この接点が追加されます。	<table><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M4</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>9</td></tr><tr><td>B</td><td>4.5</td></tr><tr><td>C</td><td>5.5</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr></table>	主回路	端子ねじ	M4	端子寸法	A	9	B	4.5	C	5.5	操作回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8
主回路	端子ねじ	M4																					
	端子寸法	A	9																				
		B	4.5																				
C		5.5																					
操作回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					
MP-20N 	 54×56 54×60も取付可能	 補助接点 2 a 2 b の場合この接点が追加されます。	<table><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>10</td></tr><tr><td>B</td><td>6</td></tr><tr><td>C</td><td>8.5</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td></tr><tr><td rowspan="3">端子寸法</td><td>A</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td></tr><tr><td>C</td><td>4.8</td></tr></table>	主回路	端子ねじ	M5	端子寸法	A	10	B	6	C	8.5	操作回路	端子ねじ	M3.5	端子寸法	A	7.8	B	5.5	C	4.8
主回路	端子ねじ	M5																					
	端子寸法	A	10																				
		B	6																				
C		8.5																					
操作回路	端子ねじ	M3.5																					
	端子寸法	A	7.8																				
		B	5.5																				
C		4.8																					

型 式	寸 法				
	D	E	F	G	H
MP-10N	10	15	5	10	5
MP-11N	10	15	5	10	5
MP-15N	10	15	5	10	5
MP-20N	10	15	5	10	5

取付間隔

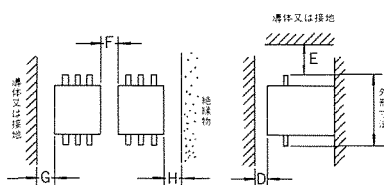

ご注意

※15N、20N、25N、30Nのカバーは、ワンタッチでカバーをはずし接点点検できますが運転時このカバーは確実に押し込んで取付け運転してください。

端子部寸法

