

●付属装置

■警報スイッチ AL ——— □

■電圧引外し装置 SHT ——— ①

■補助スイッチ AX ——— ⊗

■不足電圧引外し装置 UVT ——— ②

取付可能内部付属装置一覧表 ●印 取付可能です

6

シリーズ	型式	AX (補助スイッチ)	AL (警報スイッチ)	SHT (電圧引外し)	UVT (不足電圧引外し)	AX + AL	AX + SHT	AL + SHT	AX + AL + SHT	AX + AL + UVT
汎用 シリーズ	B-33ME	●	●			●				
	B-33E	●	●	●			●	●		
	B-53E(52E)	●	●	●			●	●		
	B-53S(52S)	●	●	●		●	●	●	● 端子台仕様のみ	
	B-63E(62E)	●	●	●			●	●		
	B-103E(102E)	●	●	●		●	●	●	●	
	B-103S(102S)	●	●	●		●	●	●	●	
	B-123C(122C)	●	●	●		●	●	●	●	
	B-223S(222S)	●	●	●		●	●	●	●	
	B-253E(252E)	●	●	●		●	●	●	●	
	B-403C(402C)	●	●	●		●	●	●	●	
	B-603HA(602HA)	●	●	●	●	●	●	●	●	●
高遮断 容量 シリーズ	B-33F(32F)	●	●	●		● 3Pのみ	● 3Pのみ	● 3Pのみ		
	B-53FB(52FB)	●	●	●	● 3Pのみ	●	● 3Pのみ	● 3Pのみ	● 3Pのみ	● 3Pのみ
	B-53FK(52FK)	●	●	●	● 3Pのみ	●	● 3Pのみ	● 3Pのみ	● 3Pのみ	● 3Pのみ
	B-103FB(102FB)	●	●	●	● 3Pのみ	●	● 3Pのみ	● 3Pのみ	● 3Pのみ	● 3Pのみ
	B-103FK(102FK)	●	●	●	● 3Pのみ	●	● 3Pのみ	● 3Pのみ	● 3Pのみ	● 3Pのみ
	B-223FA(222FA)	●	●	●	●	●	●	●	●	●
	B-403FA(402FA)	●	●	●	●	●	●	●	●	●
	B-603FA(602FA)	●	●	●	●	●	●	●	●	●
	B-803FA	●	●	●	●	●	●	●	●	●
	B-803FK	●	●	●	●	●	●	●	●	●
	B-1003FA	●	●	●	●	●	●	●	●	●

■表以外の機種については「仕様と外形」の項を参照して下さい。