

サーマルリレー

mm

外形寸法	穴明寸法	接点構成図
TR11-1E	● 単独取付不可	95-96 (b 接点) 95-98 (a 接点)
TR20-1E, TR20-2E		95-96 (b 接点) 95-98 (a 接点)
TR40-1E, TR40-2E		95-96 (b 接点) 95-98 (a 接点)
TR100-1E, TR100-2E		95-96 (b 接点) 95-98 (a 接点)