

相電流保護方式でのスターデルタ選定

電圧	最高 モートル容量 (kW)	使用器具												
		2接触器方式		3接触器方式			電磁開閉器付属サーマルリレー (49)							
		スター用 電磁接触器 (6)	デルタ用電磁 開閉器 (42+49)	絶縁用電磁 開閉器 (52+49)	デルタ用 電磁接触器 (42)	スター用 電磁接触器 (6)	RC (A)	整定電流幅 (A)	型式					
200V	5.5	MP-20HA	MP-20HA ₂	MP-20HA ₂	MP-20HA	MP-20HA	15	12～18	TJ20					
	7.5		MP-25HA ₂	MP-25HA ₂	MP-25HA									
	11		MP-35HA ₂	MP-35HA ₂	MP-35HA									
	15	MP-25HA	MP-50HA ₂	MP-50HA ₂	MP-50HA	MP-25HA	27	23～32	TJ50					
	18.5	MP-35HA				MP-65HA ₂				MP-65HA ₂	MP-65HA	MP-35HA	43	37～50
	22													
	30	MP-50HA	MP-80HA ₂	MP-80HA ₂	MP-80HA	MP-50HA	67	55～80	TR80B-1E					
	37	MP-65HA	MP-100HA ₂	MP-100HA ₂	MP-100HA	MP-65HA	80	65～95						
	45		MP-125HA ₂	MP-125HA ₂	MP-125HA		80	65～95						
	55	MP-80HA	MP-150HA ₂	MP-150HA ₂	MP-150HA	MP-80HA	105	90～120	TR150B-1E					
	75	MP-125HA	MP-200HA ₂	MP-200HA ₂	MP-200HA	MP-125HA	1.4(140)	(110～180)						
	90	MP-150HA	MP-250HA ₂	MP-250HA ₂	MP-250HA	MP-150HA	2.4(240)	(170～290)		TR250B-1E				
	110	MP-200HA	MP-300HA ₂	MP-300HA ₂	MP-300HA	MP-200HA	2.4(240)	(170～290)						
	132	MP-250HA	MP-400HA ₂	MP-400HA ₂	MP-400HA	MP-250HA								
	150	MP-300HA				MP-300HA			3.8(380)	(280～440)				
400V	5.5	MP-20HA	MP-20HA ₂	MP-20HA ₂	MP-20HA	MP-20HA	7	5.5～8	TJ20					
	7.5						8.5	7～10						
	11													
	15	MP-25HA ₂	MP-25HA ₂	MP-25HA	15	12～18								
	18.5	MP-25HA	MP-35HA ₂	MP-35HA ₂	MP-35HA	MP-25HA	21	17～25	TJ50					
	22	MP-35HA	MP-50HA ₂	MP-50HA ₂	MP-50HA	MP-35HA								
	30													
	37	MP-50HA	MP-65HA ₂	MP-65HA ₂	MP-65HA	MP-50HA	40	32～48	TR80B-1E					
	45	MP-65HA				MP-80HA ₂	MP-80HA ₂	MP-80HA		MP-65HA	40	32～48		
	55													
	75	MP-80HA	MP-100HA ₂	MP-100HA ₂	MP-100HA	MP-80HA	80	65～95	TR150B-1E					
	90	MP-100HA	MP-125HA ₂	MP-125HA ₂	MP-125HA	MP-100HA	80	65～95						
	110	MP-125HA	MP-150HA ₂	MP-150HA ₂	MP-150HA	MP-125HA	105	90～120						
	132	MP-200HA	MP-200HA ₂	MP-200HA ₂	MP-200HA	MP-200HA	1.4(140)	(110～180)	TR250B-1E					
	150		MP-250HA ₂	MP-250HA ₂	MP-250HA									
	190		MP-300HA ₂	MP-300HA ₂	MP-300HA									
	260	MP-300HA	MP-400HA ₂	MP-400HA ₂	MP-400HA	MP-300HA	2.4(240)	(170～290)	TR400B-1E					

(注) ご使用に当たっては、適用モートル電流値×0.58の値に、サーマルリレー調整のつまみの電流値を合わせてください。