
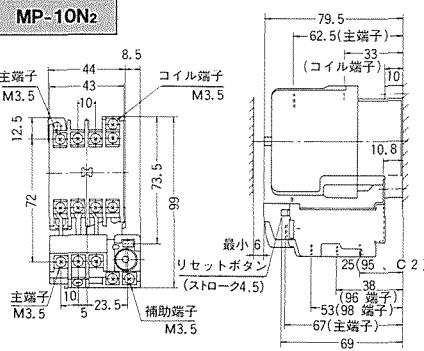
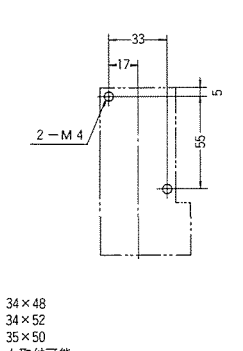
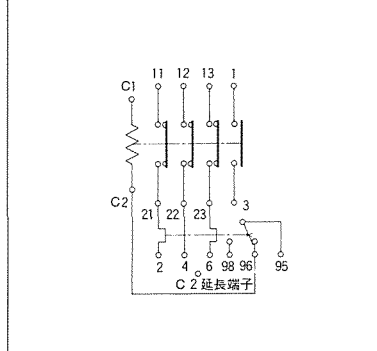
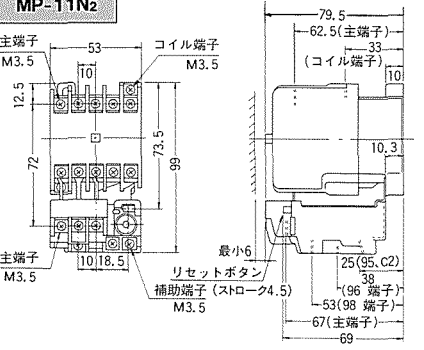
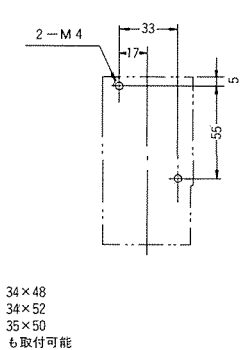
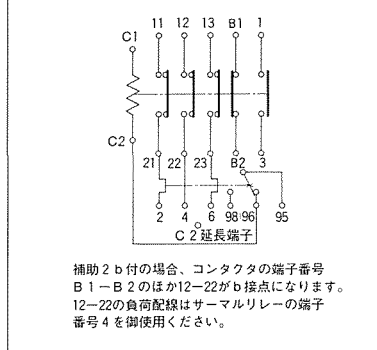
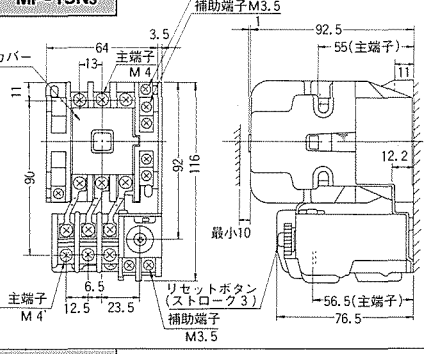
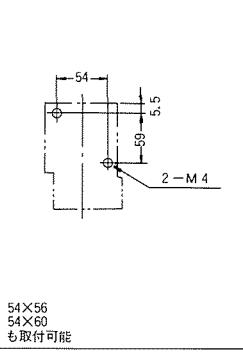
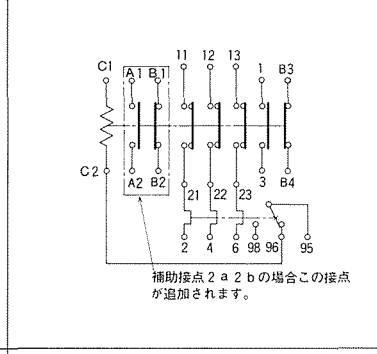
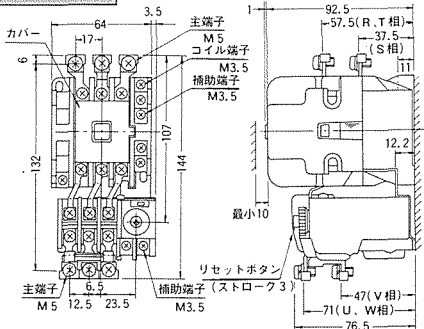
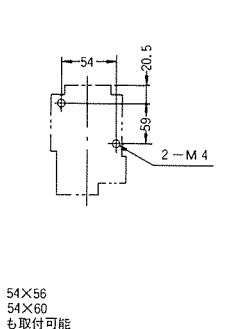
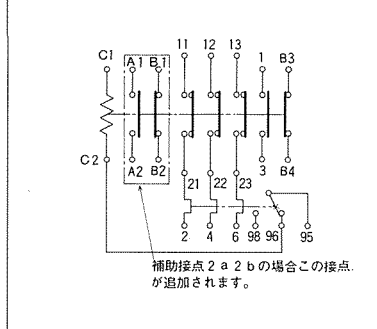


3.非可逆形・電磁開閉器


外形寸法	穴明寸法図(mm)	接点構成図	端子部寸法(mm)																														
MP-10N₂ 	 34×48 34×52 35×50 も取付可能		<table><tr><th colspan="2"></th><th>電磁接触器</th><th>サーマルリレー</th></tr><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td><td>6</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.6</td></tr><tr><td>B</td><td>5.5</td><td>4</td></tr><tr><td></td><td>C</td><td>4.8</td><td>4.5</td></tr></table>			電磁接触器	サーマルリレー	主回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.8	B	5.5	6	操作回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.6	B	5.5	4		C	4.8	4.5
		電磁接触器	サーマルリレー																														
主回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.8																													
		B	5.5	6																													
操作回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.6																													
		B	5.5	4																													
	C	4.8	4.5																														
MP-11N₂ 	 34×48 34×52 35×50 も取付可能	 補助2 b付の場合、コンタクタの端子番号 B 1－B 2 のほか12－22がb接点になります。12－22の負荷配線はサーマルリレーの端子番号4を御使用ください。	<table><tr><th colspan="2"></th><th>電磁接触器</th><th>サーマルリレー</th></tr><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td><td>6</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.6</td></tr><tr><td>B</td><td>5.5</td><td>4</td></tr><tr><td></td><td>C</td><td>4.8</td><td>4.5</td></tr></table>			電磁接触器	サーマルリレー	主回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.8	B	5.5	6	操作回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.6	B	5.5	4		C	4.8	4.5
		電磁接触器	サーマルリレー																														
主回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.8																													
		B	5.5	6																													
操作回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.6																													
		B	5.5	4																													
	C	4.8	4.5																														
MP-15N₃ 	 54×56 54×60 も取付可能	 補助接点 2 a 2 b の場合この接点が増加されます。	<table><tr><th colspan="2"></th><th>電磁接触器</th><th>サーマルリレー</th></tr><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M4</td><td>M4</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>9</td><td>9</td></tr><tr><td>B</td><td>4.5</td><td>5</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td><td>4</td></tr><tr><td></td><td>C</td><td>4.8</td><td>4.5</td></tr></table>			電磁接触器	サーマルリレー	主回路	端子ねじ	M4	M4	端子寸法	A	9	9	B	4.5	5	操作回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.8	B	5.5	4		C	4.8	4.5
		電磁接触器	サーマルリレー																														
主回路	端子ねじ	M4	M4																														
	端子寸法	A	9	9																													
		B	4.5	5																													
操作回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.8																													
		B	5.5	4																													
	C	4.8	4.5																														
MP-20N₃ 	 54×56 54×60 も取付可能	 補助接点 2 a 2 b の場合この接点が増加されます。	<table><tr><th colspan="2"></th><th>電磁接触器</th><th>サーマルリレー</th></tr><tr><td rowspan="3">主回路</td><td>端子ねじ</td><td>M4</td><td>M5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>10</td><td>10</td></tr><tr><td>B</td><td>6</td><td>6</td></tr><tr><td rowspan="3">操作回路</td><td>端子ねじ</td><td>M3.5</td><td>M3.5</td></tr><tr><td rowspan="2">端子寸法</td><td>A</td><td>7.8</td><td>7.8</td></tr><tr><td>B</td><td>5.5</td><td>4</td></tr><tr><td></td><td>C</td><td>4.8</td><td>4.5</td></tr></table>			電磁接触器	サーマルリレー	主回路	端子ねじ	M4	M5	端子寸法	A	10	10	B	6	6	操作回路	端子ねじ	M3.5	M3.5	端子寸法	A	7.8	7.8	B	5.5	4		C	4.8	4.5
		電磁接触器	サーマルリレー																														
主回路	端子ねじ	M4	M5																														
	端子寸法	A	10	10																													
		B	6	6																													
操作回路	端子ねじ	M3.5	M3.5																														
	端子寸法	A	7.8	7.8																													
		B	5.5	4																													
	C	4.8	4.5																														

寸法	取付間隔(最小)(mm)				
型式	D	E	F	G	H
MP-10N ₂	10	15	5	10	5
MP-11N ₂	10	15	5	10	5
MP-15N ₃	10	15	5	10	5
MP-20N ₃	10	15	5	10	5

取付間隔

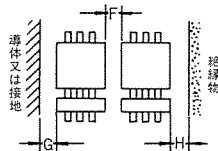

標準接続図

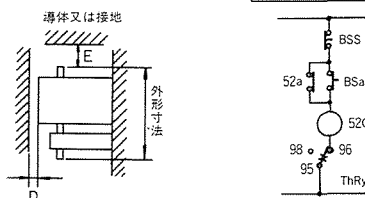

端子部寸法

