


ケースカバー付電磁開閉器の外形寸法●

■外形寸法表

型式	寸法											
	A	B	C	D	E	F	G	H	K	L	d ₃	d ₄
BMP-10H₂	85	65	125	150	12.5	10	M4	97	35	25	22	—
BMP-20H₃	110	75	140	175	17.5	17.5	M5	114	35	30	22	—
BMP-25H₃ BMP-35H₃ BMP-50H₃	150	105	210	255	22.5	22.5	M5	130	50	40	22	28

■外形寸法図

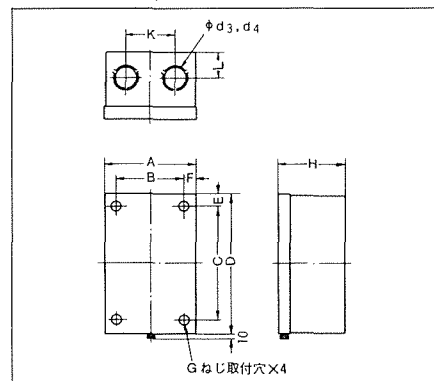


取付間隔の寸法●

■寸法表

フレーム	取付間隔(最小)				
	A	B	C	D	E
10H	10	15	5	10	5
10BH	10	15	—	10	5
11H	10	15	5	10	5
20H~50H	9	15	5	10	5
50N	15	15	5	10	5
60N~150N	25	15	10	10	10
200N	30	25	10	10	10
250N	30	20	10	10	10
300N~400N	40	30	10	10	10

■寸法図

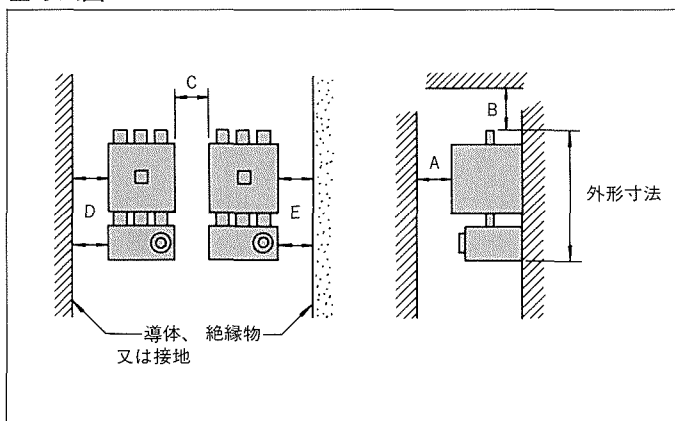


端子部の寸法●

■寸法表

フレーム		端子寸法							
		主回路				操作回路			
		端子ネジ	A	B	C	端子ネジ	A	B	C
電磁 接触器	10H	M3.5	7.8	5.5	4.8	M3.5	7.8	5.5	4.5
	10BH	M3.5	7.8	4	4.5	M3.5	7.8	5.5	4.5
	11H	M3.5	7.8	5.5	4.8	M3.5	7.8	5.5	4.8
	20H	M4	9	4.5	5.5	M3.5	7.8	5.5	4.8
	25H	M5	10	6	8.5	M3.5	7.8	5.5	4.8
	35H, 50H	M5	12.5	6	8	M3.5	7.8	5.5	4.8
	50N	M6	16.5	8	8	M3.5	7.8	5.5	4.8
	60N	M6	22	8	11	M3.5	7.8	5.5	4.8
	100N	M 8ボルト	22	8	11	M3.5	7.8	5.5	4.8
	120N, 150N	M 8ボルト	27	10	9.5	M3.5	7.8	5.5	4.8
サーマル リレー	200N, 250N	M10ボルト	37	12.5	16	M3.5	7.8	5.5	4.8
	300N, 400N	M12ボルト	44	15	20	M3.5	7.8	5.5	4.8
	TR11	M3.5	7.8	6	4.5	M3.5	7.8	4	4.5
	TR20	M4	9	5(7.4)	5	M3.5	7.8	4	4.5
	TR40	M5	13	6.5(10)	7	M3.5	7.8	4	4.5
	TR100	M6	16.5	8.5(10.5)	8(9)	M3.5	7.8	4	4.5

■寸法図

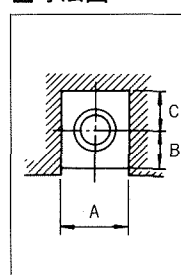

端子ネジの適正締付トルク●

端子ネジ	適正締付トルク
M3.5	10
M4	15
M5	35
M6	50
M8ボルト	100
M10ボルト	140
M12ボルト	200

()内は電源側の寸法です。