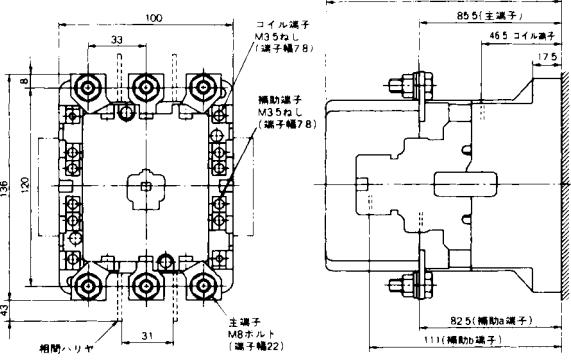
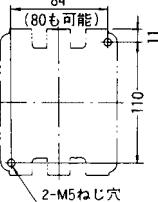
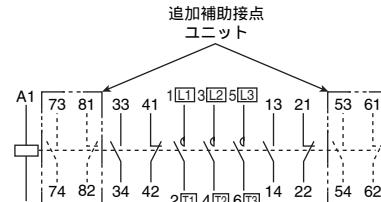
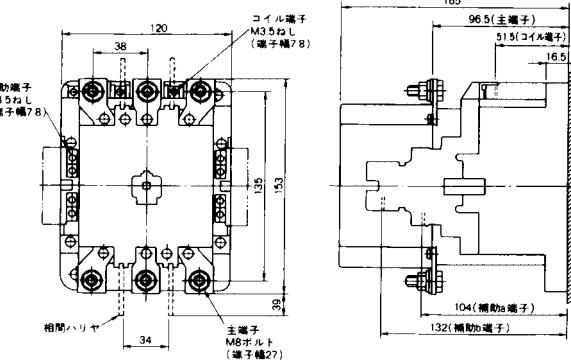
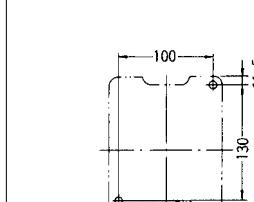
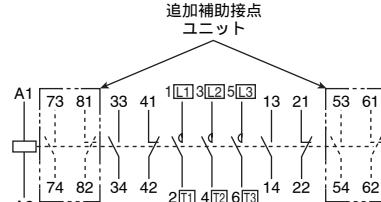
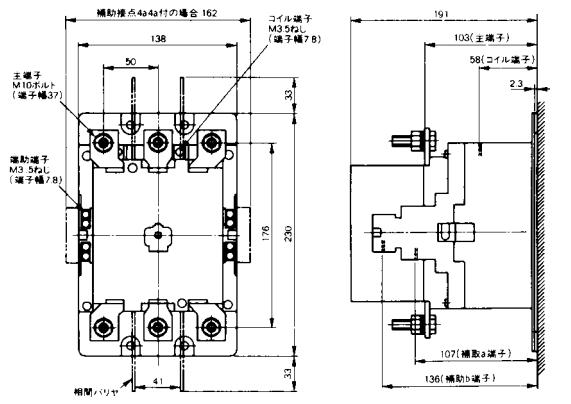
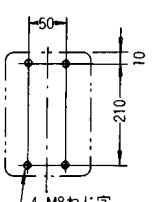
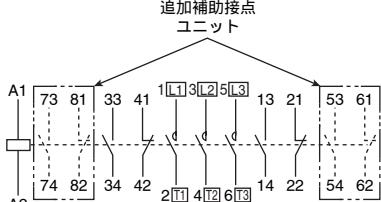
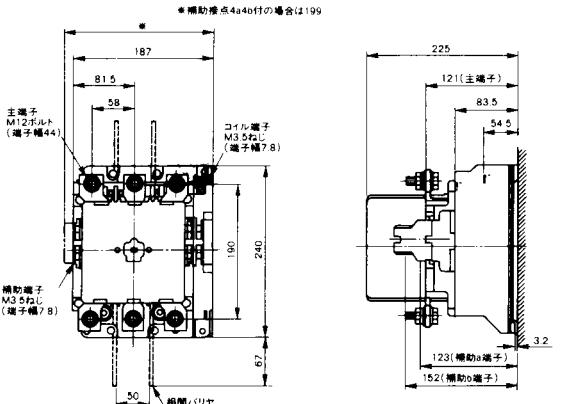
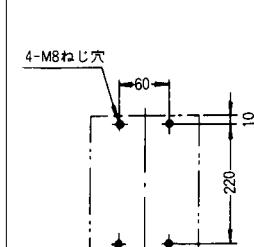
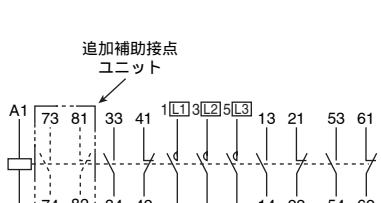


## 外形寸法図

### 電磁接触器(非可逆形)

外形寸法	穴明寸法	接点構成図
<b>MP-100HA、125HA</b> 	 2-M6ねじ穴 84 (80も可能) 110	 追加補助接点ユニット A1: 73 81 33 41 1 [1] 3 [2] 5 [3] 13 21 53 61 A2: 74 82 34 42 2 [1] 4 [2] 6 [3] 14 22 54 62  補助接点4a4bの場合この接点が追加されます。なお追加補助接点だけの別売りもあります。ワンタッチで取付できます。
<b>MP-150HA</b> 	 2-M6ねじ穴 100 115 130	 追加補助接点ユニット A1: 73 81 33 41 1 [1] 3 [2] 5 [3] 13 21 53 61 A2: 74 82 34 42 2 [1] 4 [2] 6 [3] 14 22 54 62  補助接点4a4bの場合この接点が追加されます。なお追加補助接点だけの別売りもあります。ワンタッチで取付できます。
<b>MP-200HA、250HA</b> 	 4-M8ねじ穴 60 10 210	 追加補助接点ユニット A1: 73 81 33 41 1 [1] 3 [2] 5 [3] 13 21 53 61 A2: 74 82 34 42 2 [1] 4 [2] 6 [3] 14 22 54 62  補助接点4a4bの場合この接点が追加されます。なお追加補助接点だけの別売りもあります。ワンタッチで取付できます。
<b>MP-300HA、400HA</b> 	 4-M8ねじ穴 60 10 220	 追加補助接点ユニット A1: 73 81 33 41 1 [1] 3 [2] 5 [3] 13 21 53 61 A2: 74 82 34 42 2 [1] 4 [2] 6 [3] 14 22 54 62  補助接点4a4bの場合この接点が追加されます。なお追加補助接点だけの別売りもあります。ワンタッチで取付できます。