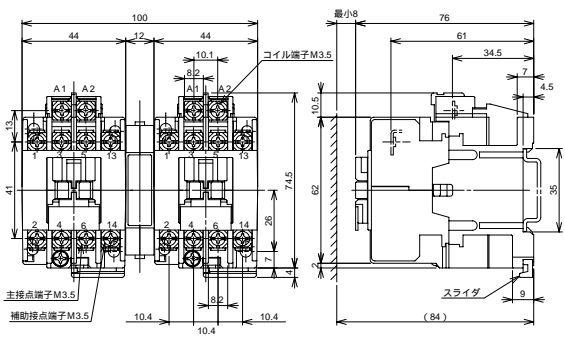
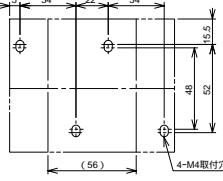
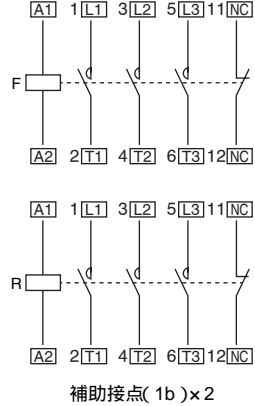
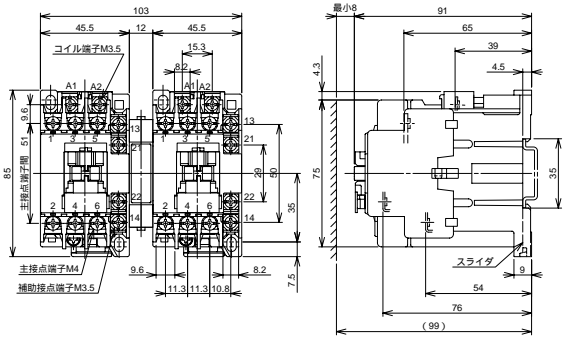
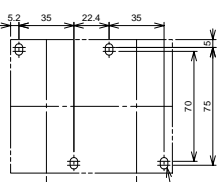
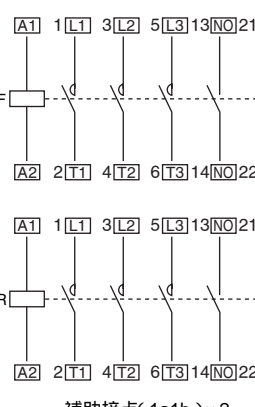
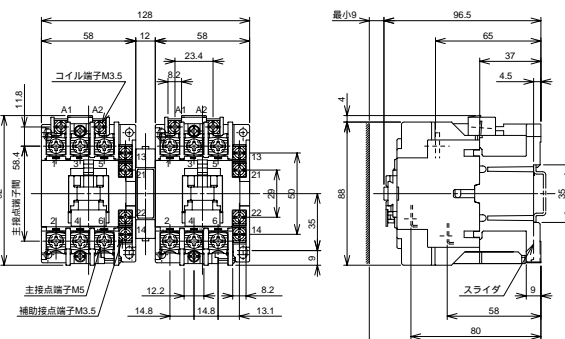
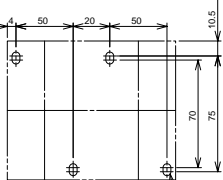
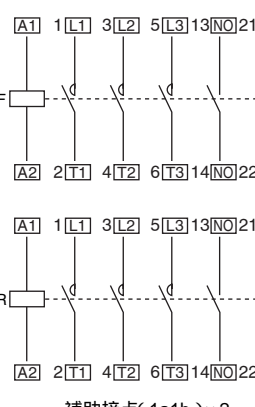
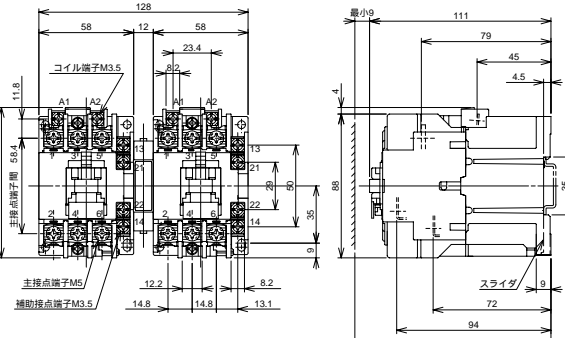
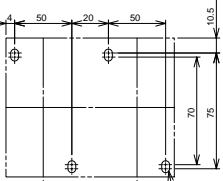
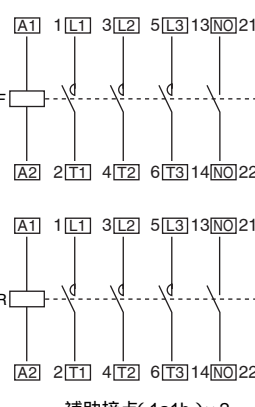


電磁接触器(可逆形)

単位：mm

| 外形寸法 | 穴寸法 | 接点構成図 |
|---|--|---|
| MR-10HA  <p>外形寸法: 44, 100, 44, 10.1, 8.2, 10.5, 76, 61, 34.5, 7, 4.5, 74.5, 62, 10.4, 10.4, 10.4, 8.2, 8.2, 10.4, 10.4, 9, 9, (84)</p> <p>穴寸法: 5, 34, 22, 34, 15.5, 48, 52, (56), 4-M4取付穴</p> |  <p>4-M4取付穴</p> |  <p>補助接点(1b)×2</p> |
| MR-20HA  <p>外形寸法: 45.5, 103, 12, 45.5, 15.3, 8.2, 91, 65, 39, 4.5, 75, 4.3, 8.5, 51, 9.6, 13, 21, 30, 30, 35, 9.6, 8.2, 7.5, 11.3, 11.3, 10.8, 9, 9, (99)</p> <p>穴寸法: 5, 35, 22.4, 35, 7.5, 70, 75, (57.4), 4-M4取付穴</p> |  <p>4-M4取付穴</p> |  <p>補助接点(1a1b)×2</p> |
| MR-25HA  <p>外形寸法: 58, 128, 12, 58, 23.4, 8.2, 96.5, 65, 37, 4.5, 88, 4, 11.8, 54.4, 13, 21, 30, 30, 35, 12.2, 8.2, 14.8, 14.8, 13.1, 9, 9, (105.5)</p> <p>穴寸法: 5, 50, 20, 50, 10.5, 70, 75, (70), 4-M4取付穴</p> |  <p>4-M4取付穴</p> |  <p>補助接点(1a1b)×2</p> |
| MR-35HA  <p>外形寸法: 58, 128, 12, 58, 23.4, 8.2, 111, 79, 45, 4.5, 88, 4, 11.8, 54.4, 13, 21, 30, 30, 35, 12.2, 8.2, 14.8, 14.8, 13.1, 9, 9, (120)</p> <p>穴寸法: 5, 50, 20, 50, 10.5, 70, 75, (70), 4-M4取付穴</p> |  <p>4-M4取付穴</p> |  <p>補助接点(1a1b)×2</p> |

電磁接触器

電磁開閉器

補助電磁接触器

操作コイル

サーマルリレー

コイルサイジングレバ

資料

外形寸法図